




Roof Renewal System Details

Pipe Flashing

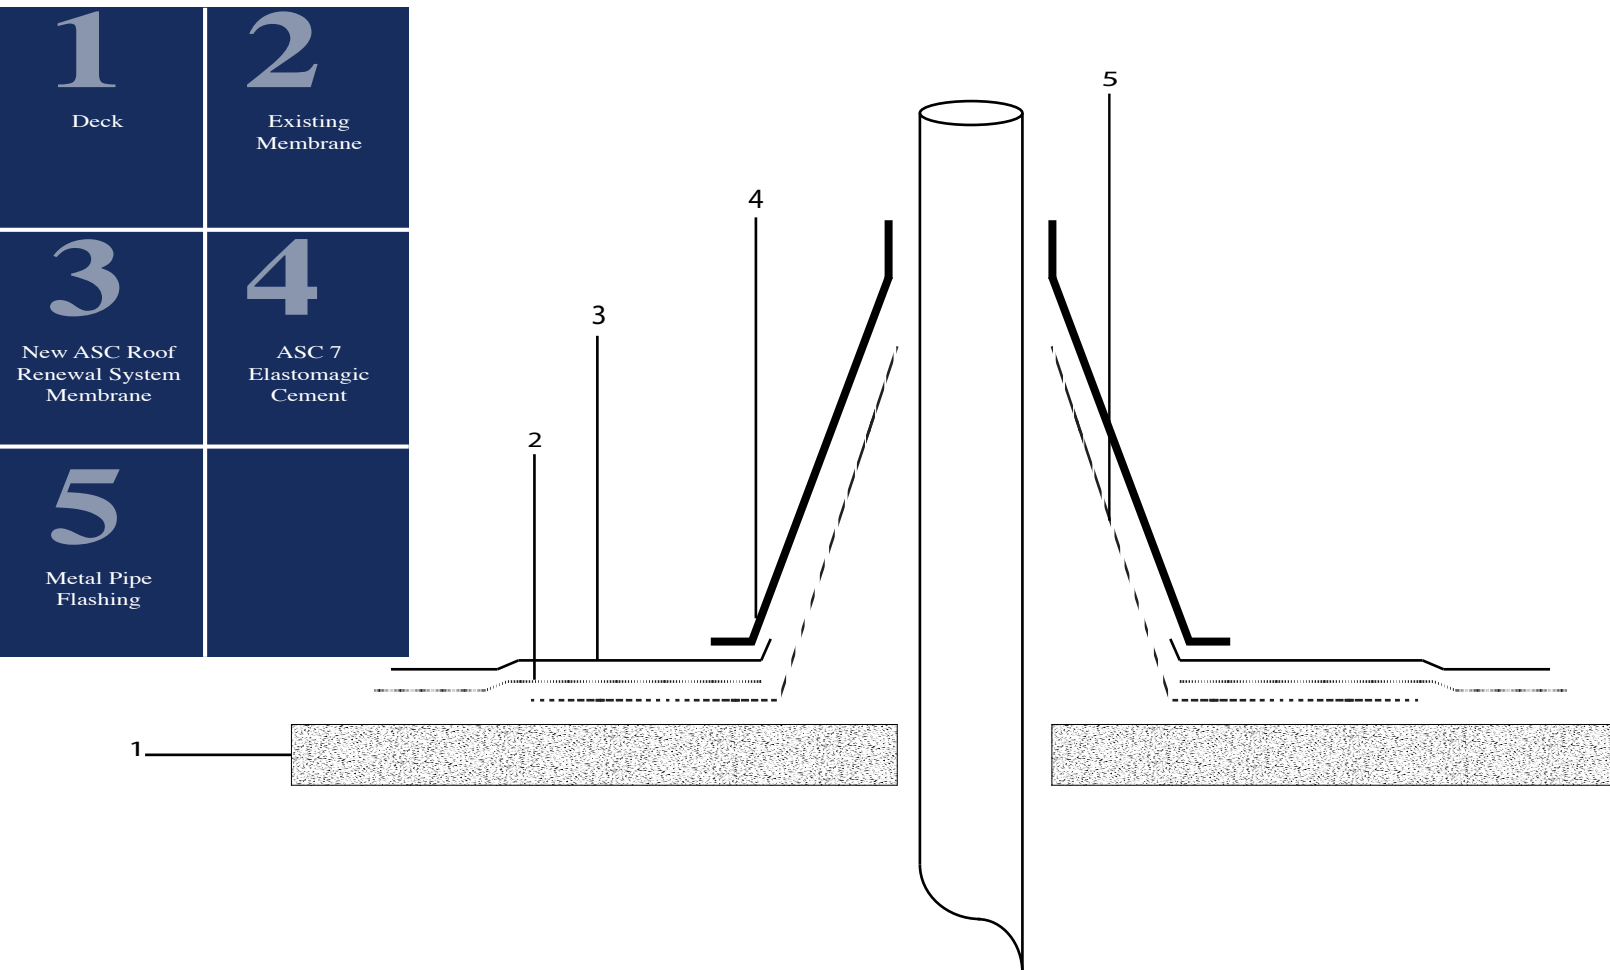

Pre-Application:

Surfaces must be structurally sound, cleaned, dried, and free of moisture on and beneath the surface. Remove all dust, dirt, oil, loose granules and any other foreign contaminants. Remove any other loose, flaking or existing waterproof coatings, which may affect the adhesion. Rusted metal should be cleaned with a wire brush.

Application:

In areas between pipe flashing and pipe - Apply first coat of ASC 7 Elastomagic Cement with brush or trowel at 1/8-1/4 inch thickness. Immediately following embed ASC F Polyester Fabric. Lightly brush the polyester fabric into ASC 7 to achieve full saturation, smoothing out wrinkles or voids. Apply second coat of ASC 7 Elastomagic Cement, ensuring the polyester fabric is completely covered around the pipe / flashing detail (ASC 3 Course Method).

As needed repeat procedure between Base Flashing and Existing Roof Deck.

